


ZEKTOR

Clarity Elite 8x8 Quick Start Guide


1

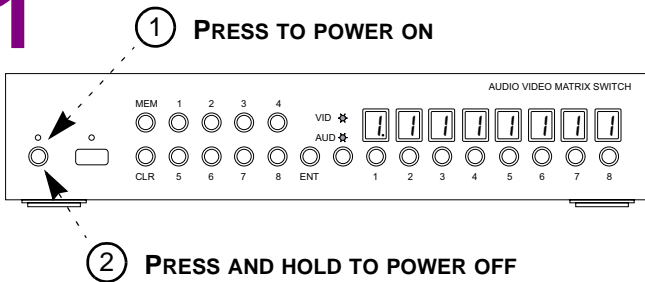

POWERING ON / OFF

- 1 To turn on: Press the POWER button.
- 2 To turn off: Press and hold the POWER button until the Clarity Elite 8x8 powers off.

2

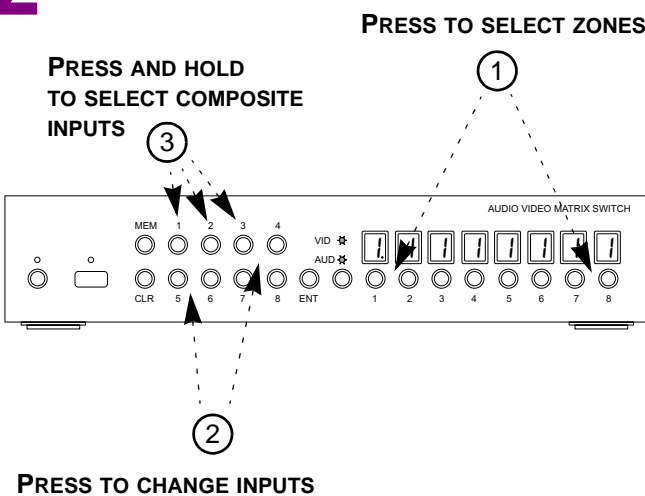


HOW TO MAP AN INPUT TO ONE OR MORE ZONES

- 1 Press a button under a zone LED, the LED will flash. By pressing multiple zone buttons, multiple zones can be selected.
- 2 Press an input button. All selected zones will be mapped to the new input. The zones will remain selected and you can continue pressing input buttons to remap zones.
- 3 Press and hold input buttons 1 through 3 to select the composite inputs:
 - Button '1' selects 'A' inputs.
 - Button '2' selects 'C' inputs.
 - Button '3' selects 'E' inputs.

3

② WHEN LED IS LIT, CHANNEL WILL SWITCH

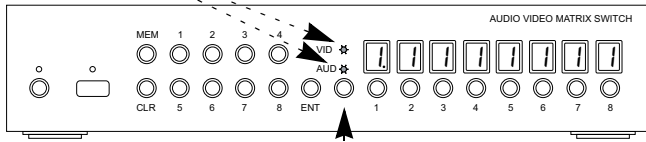


① PRESS UNTIL DESIRED LED'S ARE LIT

HOW TO USE AUDIO / VIDEO BREAKAWAY

- 1 Press the VID/AUD button until the channel to break away is the only LED that is lit.
- 2 LEDs indicate what channels will switch when remapping zones:
 - If only the VID LED is lit, then only the video channel will switch.
 - If only the AUD LED is lit, then only the audio channel will switch.

4

② PRESS TO ADJUST VOLUME AND TONE

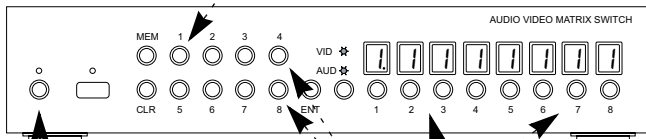


① PRESS AND RELEASE TO ENTER SETUP

③ USE 4 & 8 TO RAISE AND LOWER LEVELS

④ SWITCH BETWEEN ZONES

CHOOSE BETWEEN VOLUME AND TONE ADJUSTMENTS

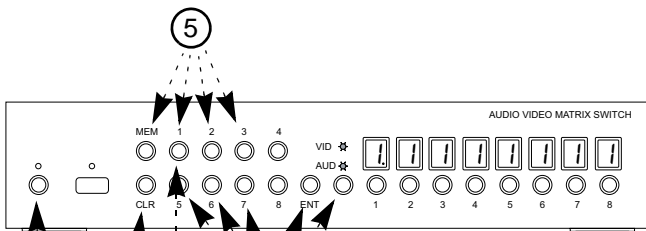

⑤ CHOOSE BETWEEN VOLUME AND TONE ADJUSTMENTS

⑥ PRESS AND HOLD FOR MASTER VOLUME

⑦ PRESS TO ZERO BALANCE, TONE AND EQUALIZER SETTINGS

⑧ PRESS TO RETURN TO NORMAL

HOW TO ADJUST VOLUME / TONE / EQUALIZER CONTROLS

- 1 Press and release the POWER button, the display will fill with dashes '-'-.
- 2 Press the '1' button to adjust volume and tone settings.
- 3 Use the '4' and '8' buttons to raise and lower the volume settings.
- 4 Use the zone buttons to switch between zones.
- 5 Use buttons MEM, 1, 2, 3, 5, 6, 7, ENT, and VID/AUD to choose between volume and tone adjustments:
 - MEM = Balance
 - 1 = Volume
 - 2 = Bass
 - 3 = Treble
 - 5 = Eq1 (100Hz)
 - 6 = Eq2 (330Hz)
 - 7 = Eq3 (1000Hz)
 - ENT = Eq4 (3300Hz)
 - VID/AUD = Eq5 (10000Hz)
- 6 Press and hold the '1' button to select the Master Volume for all zones.
- 7 Press the CLR button to set balance, tone and equalizer settings to zero.
- 8 Press the POWER button to return to normal.